

Remote Allocation System (RAS)



FUNCTION	KEY SEQUENCE			NOTES
FOR STEPS 1-3 PLEASE ENTER THE RELEVANT NUMBERS IN THE SEQUENCE SHOWN BELOW (EG. STEP1 STEP2 STEP3)				
	STEP 1	STEP 2	STEP 3	
OPEN LOCK	[User Code]			
OPEN LOCK	[Master Code]			
CLOSE LOCK				RE-LOCKS AUTOMATICALLY AFTER 4 SECONDS
CHANGE USER CODE FOR RAS	[logo] NEXT User Code			USER CODE IS FOUR DIGITS
BATTERY CHECK	[logo] [logo]			REPLACE BATTERIES IF RED LIGHT SHOWS
CANCEL CURRENT RAS	[logo] [RAS User Code]	00		CURRENT RAS AND FRIENDLY CODE WILL NOT WORK UNTIL NEXT USER CODE OR MASTER IS ENTERED
CHANGE MASTER CODE	[logo] [Old Master Code]	01	[New Master Code] [New Master Code]	MASTER CODE IS EIGHT DIGITS
ADD FRIENDLY CODE FOR RAS	[logo] [RAS User Code]	04	[Friendly code]	OPEN YOUR LOCK WITH FRIENDLY CODE OR RAS CODE
REMOVE FRIENDLY CODE FOR RAS	[logo] [RAS User Code]	05		DELETES FRIENDLY CODE
EXIT RAS MODE INTO PUBLIC MODE	[logo] [Master Code]	08		ENTERS PUBLIC MODE AND DELETES ALL USERS CODES
EXIT RAS MODE INTO PRIVATE MODE	[logo] [Master Code]	09	[New User Code]	DELETES ALL EXISTING USER CODES
SET AUDIBLE BUTTONS ON	[logo] [Master Code]	12		
SET AUDIBLE BUTTONS OFF	[logo] [Master Code]	13		
SET RAS MODE	[logo] [Master Code]	20	[Lock Serial Number][First Code]	FOUR DIGIT USER CODE IS ALLOCATED BY RAS SOFTWARE
RAS ALGORITHM RESET	[logo] [Master Code]	20	[Lock Serial Number][First Code]	
RE-LOCK TIME	[logo] [Master Code]	23	[Enter chosen time length]	1 = 8 SECONDS, 2 = 16 SECONDS, 3 = 32 SECONDS 4 = 40 SECONDS, 5 = 50 SECONDS, 6 = 60 SECONDS
LOCK OUT MODE	[logo] [Master Code]	24		IF USER GET CODE WRONG 5 TIMES- 8 SECOND TIME OUT
REMOVE LOCK OUT MODE	[logo] [Master Code]	25		
ONE TIME USE REMOTE ALLOCATION SYSTEM (RAS)				
SET ONE TIME RAS MODE	[logo] [Master Code]	22	[Lock Serial Number][First Code]	FOUR DIGIT ONE TIME USE CODE ALLOCATED BY RAS SOFTWARE
RAS ONE TIME ALGORITHM RESET	[logo] [Master Code]	22	[Lock Serial Number][First Code]	
OPEN LOCK	[Current User Code] or [Friendly code]			
ONCE THE RAS CURRENT CODE IS USED ONCE IT WILL BE DELETED WITH THE FRIEND CODE AND WILL ONLY OPEN WITH THE NEXT RAS CODE OR MASTER CODE				

Remote Allocation System (RAS)

NOTES	BATTERY CONDITION INDICATOR
ALL ACCEPTABLE BUTTON PRESSES ARE SIGNIFIED BY A GREEN LIGHT	GREEN LIGHTS - GOOD AMBER LIGHTS - OK
INCOMPLETE FUNCTIONS "TIME-OUT" AFTER 4 SECONDS	RED LIGHT - CHANGE BATTERIES AS SOON AS POSSIBLE
ERRORS AND "TIME-OUTS" ARE SIGNIFIED BY FLASHING RED LIGHT	FLASHING RED LIGHT PRIOR TO LOCK OR UNLOCK INDICATES LOW BATTERY VOLTAGE CHANGE BATTERIES AS SOON AS POSSIBLE
FOLLOWING AN ERROR OR "TIME-OUT", UNIT REVERTS TO PREVIOUS SETTINGS	MAY VARY UPON THE DIGITAL LOCK THAT YOU HAVE. PLEASE SEE LOCK OPERATING AND PROGRAM INSTRUCTIONS FOR MORE INFORMATION
RAS MODE SHOULD BE USED ONLY IN CONJUNCTION WITH LOWE AND FLETCHER LTD. REMOTE ALLOCATION SYSTEM (RAS) SOFTWARE	
MASTER CODE (8 digits)	
<div style="display: flex; justify-content: center; gap: 10px;"> <input style="width: 20px; height: 20px; border: 1px solid red;" type="text"/> <input style="width: 20px; height: 20px; border: 1px solid red;" type="text"/> <input style="width: 20px; height: 20px; border: 1px solid red;" type="text"/> <input style="width: 20px; height: 20px; border: 1px solid red;" type="text"/> <input style="width: 20px; height: 20px; border: 1px solid red;" type="text"/> <input style="width: 20px; height: 20px; border: 1px solid red;" type="text"/> <input style="width: 20px; height: 20px; border: 1px solid red;" type="text"/> <input style="width: 20px; height: 20px; border: 1px solid red;" type="text"/> </div>	
ENSURE THAT YOU CHANGE THE DEFAULT MASTER CODE TO YOUR OWN MASTER CODE AND KEEP A SAFE RECORD - IT IS NOT POSSIBLE TO PROGRAM THE LOCK WITHOUT IT	

LOWE & FLETCHER LTD

Moorcroft Drive, Wednesbury, West Midlands, WS10 7DE, UK
 Tel: +44 (0) 121 505 0400
 Email: sales@lowe-and-fletcher.co.uk
 www.lowe-and-fletcher.co.uk

LOWE & FLETCHER, INC.

650 Airport Place, Norton Shores, MI-49441, Michigan, USA
 Tel: +1 (616) 994 0490
 Email: sales@loweandfletcherinc.com
 www.loweandfletcherinc.com

EURO-LOCKS SA NV

Rue de la Fontaine 8, 6600 Bastogne, Belgium
 Tel: +32 61 212 261
 Email: sales@euro-locks.be
 www.euro-locks.be

EURO-LOCKS SA

1 Rue du Stade, 57730 Folschviller, France
 Tel: +33 (0) 3 87 92 61 11
 Email: euro-locks@euro-locks.fr
 www.euro-locks.fr

EURO-LOCKS GMBH

Am Bruchwald 22, 66280 Sulzbach/Neuweiler, Germany
 Tel: +49 (0) 6897 9072 0
 Email: vertrieb@euro-locks.de
 www.euro-locks.de

EURO-LOCKS SP. Z O.O.

ul. Pawła 29, 41-708 Ruda Śląska, Poland
 Tel: +48 (32) 344-78-70, -82, -84
 Email: sekretariat@euro-locks.pl
 www.euro-locks.pl